

Data Downlink Ground Station AD-DLGS

Online Display of Flight Inspection Data for NAVAID Technicians





Key Features:

- Online visualization of Flight Inspection Data on ground
- Improved communication with NAVAID technicians
- Remote controlled by the AeroFIS® on board
- No operation training required




Flight Inspection Aircraft




Data Downlink Ground Station

Purpose of the Equipment

The purpose of AD-DLGS equipment is the visualization of Flight Inspection Data on ground during inspection of navigation aids (NAVAIDS). The equipment provides graphical visualization of Flight Inspection Parameters by transmitting data via a data link from the AeroFIS[®] installed in the Flight Inspection Aircraft. Especially during commissioning of Instrument Landing Systems, VORs or DMEs it is a very helpful tool for improving communication with the ground technicians. The effect of NAVAID adjustments is directly indicated to the technicians on ground. The communication between the Flight Inspector on board and the ground technicians is improved tremendously.

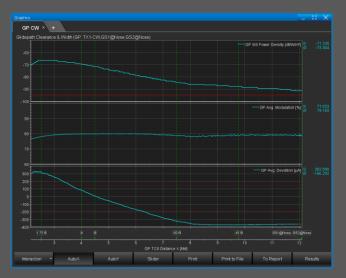

Downlink Station Case

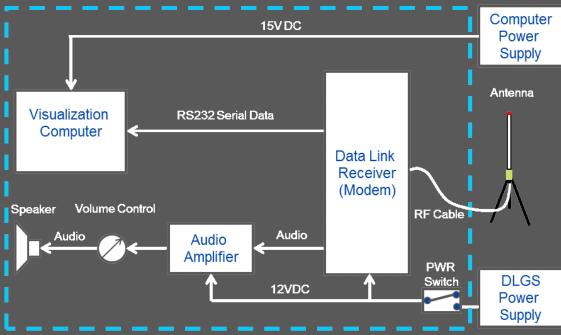

Theory of Operation:

During calibration measurements, the AeroFIS® installed in the Flight Inspection Aircraft transmits Flight Inspection Parameters via an on-board data downlink telemetry modem. On ground the signals are received by an antenna, connected to a receive data link telemetry modem. The modem provides the data to a Visualization Computer (ruggedized notebook). The Visualization Computer runs software for graphical visualization of the received data. The Visualization Computer is steered by the airborne AeroFIS®; no operation on ground is required \rightarrow no special training of NAVAID technicians required!

Data Downlink Ground Station

Ground Station Case containing:

- Visualization Computer
- AC power supply for Computer
- AC power supply for DLGS
- Data Link Modem
- Audio Amplifier and Speaker
- Quick User Guide

Accessories containing:

- Data Link Antenna
- Tripod
- RF-Cable



The DLGS is typically set up in the shelter of the NAVAID under calibration. The equipment is connected to AC power and to the telemetry antenna placed on a tripod outside of the shelter.

The only required operation is switching on the equipment and starting the DLGS software on the Visualization Computer. During the flight inspection approach the display on the ground is mirroring the data recorded from the Flight Inspection System. Whenever the operator on board the aircraft starts a new measurement, the corresponding graphics are displayed on the ground.

During the phases where no run is active on board the aircraft, the AeroFIS® just sends alive messages to inform the ground about the data link status. If no data should be received from the aircraft, a corresponding warning is displayed on the ground. Typical range of the data link is 40 NM within line of sight.

Activating an integrated speaker allows listening to the typical digital telemetry data burst audio for data link diagnosis.

Data Downlink Software:

For each run that is started on board the Flight Inspection Aircraft a new set of graphics is provided by the ground station. The scaling and selection of parameters displayed on ground is according to the current flight inspection program on board, no software operation is required on ground. Nevertheless the software on the DLGS provides:

- Zoom in/out of graphics
- Measure within graphics
- Recall graphics of previous runs

Dimension and Weight

- Dimensions of DLGS case (W x H x D):
- Weight of DLGS case:

530mm x 430mm x 220 mm

11kg

Solution for your AeroFIS®

Every AeroFIS® can be upgraded to include the Data Downlink option. An additional Data Downlink telemetry modem will be installed in the console. Various options for downlink antenna exist. Please contact your product support for details.



We keep you on the best path!



Aerodata AG · Hermann-Blenk-Straße 34-36 · 38108 Braunschweig/Germany Phone +49 531/2359-0 · Fax: +49 531/2359-158 · E-Mail: mail@aerodata.de

www.aerodata.de